(Ref. Nr.) Description	Function
(3) Tachometer	Shows engine revolutions per minute.
(4) Tachometer red zone	Never allow the tachometer needle to enter the red zone, even after the engine has been broken in.
	NOTICE
	Running the engine beyond recommended maximum engine spped (the beginning of the tachometer red zone) can damage the engine.
(5) Coolant temperature gauge	Shows coolant temperature.
(6) Right turn signal indicator(green)	Flashes when the right turn signal operates.
(7) Odometer / Tripmeter button	This button is used to select the tripmeter 1 or tripmeter 2 or odometer (see page 17)