

Hourmeter [Australia model only]

The hourmeter (Fig. 2-16) shows hours and tenths of hours that the engine has run. It is operated when the ignition switch is turned ON, providing accurate means of knowing when the TRX300FW is to be serviced. Remove the rubber cap (2) below the hourmeter when the meter glass is clouded. Reinstall the cap securely after the meter glass becomes cleared.

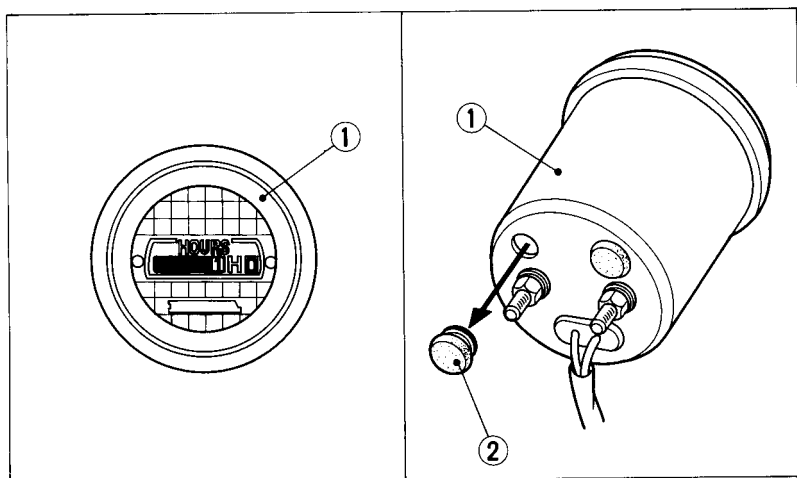


Fig. 2-16

- (1) Hourmeter
- (2) Rubber cap