

ENGINE GUARD AND SKID PLATES

The engine guard and skid plates (Fig. 4-35) protect the front frame/lower arm, engine crankcase and the rear brake. Check the guard and plates for cracks, damage or looseness at intervals shown in the Maintenance Schedule.

Have the engine guard and skid plates replaced if they are cracked or damaged. If the plate bolts are loose, tighten them securely.

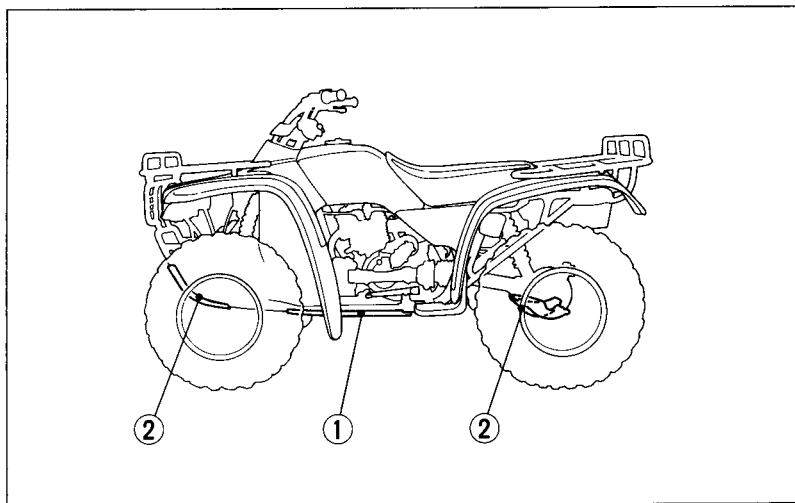


Fig. 4-35

(1) Engine guard

(2) Skid plates