

TRANSPORTING YOUR TRX300FW

When you transport your TRX300FW, we recommend that you carry the vehicle in its normal operating position (on all four wheels) and follow these procedures:

1. Set the parking brake and place the transmission in gear.
2. Turn the fuel cap lever and fuel valve OFF.
3. Secure the vehicle properly. Suitable "tie downs" are available from your Honda dealer. Ordinary rope is not recommended because it can stretch under load.

If it is necessary to incline your TRX300FW upright on the rear end:

1. Follow steps 1 and 2 above.
2. Place the carburetor drain tube in a suitable container.
3. Turn the drain screw counterclockwise and drain the fuel from the carburetor.
4. After draining the carburetor, turn the drain screw clockwise until it is tight.
5. Pour the drained fuel into the fuel tank.
6. Tilt the vehicle and secure properly.

Do not tow your TRX300FW behind a car or other vehicle.