

3. Spray the inside of the fuel tank with an aerosol rust-inhibiting oil. Reinstall the fuel cap.
4. Remove the spark plug and pour one tablespoon (15–20 cc) of clean engine oil into the cylinder.
Operate the starter for a few seconds to distribute the oil, then reinstall the spark plug. (Make sure the engine stop switch is OFF before pressing the starter button.)
5. Remove the battery and store it in an area protect from freezing temperatures and direct sunlight and out of the reach of children. Slow charge the battery once a month.

▲ WARNING

POTENTIAL HAZARD

Allowing open flames or sparks near the battery.

WHAT CAN HAPPEN

Gases may explode and possibly cause injury.

HOW TO AVOID THE HAZARD

Do not allow open flames or sparks near the battery.

6. Wash and dry the TRX300FW, and wax all painted surfaces.
7. Inflate the tires to their recommended pressures.
8. Place the TRX300FW on blocks to raise all four tires off the ground.