

Introduction

This service manual describes the service procedures of the CBR600F.

This Model Specific Manual includes every service procedure that is of a specific nature to this particular model. Basic service procedures that are common to other Honda Motorcycle/Motor Scooter/ATV Common Service Manual. This Model Specific Service Manual should be used together with the Common Service Manual in order to provide complete service information on all aspects this motorcycle.

Performing the first scheduled maintenance is very important.

It compensates for the initial wear that occurs during the break-in period.

Section 1 and 3 apply to the whole motorcycle, section 2 illustrates procedures for removal/installation of components that may be required to perform service describe parts of the motorcycle, grouped according locations.

Find the section you want on this page, then turn the table of contents on the first page of the section.

Most sections describe the service procedure through system illustration. Refer to the next page for details on how to use this manual.

If you don't know the source of the trouble, go to section 20 Troubleshooting.

ALL INFORMATION, ILLUSTRATION, DIRECTIONS AND SPECIFICATIONS INCLUDED IN THIS PUBLICATION ARE BASED ON THE LATEST PRODUCT INFORMATION AVAILABLE AT THE TIME OF APPROVAL FOR PRINTING. HONDA MOTOR CO., LTD. RESERVES THE RIGHT TO MAKE CHANGES AT ANY TIME WITHOUT INCURRING ANY OBRIGATION WHATEVER. NO PART OF THIS PUBLICATION MAY BE REPRODUCED WITHOUT WRITTEN PERMISSION. THIS MANUAL IS WRITTEN FOR PERSONS WHO HAVE ACQUIRED BASIC KNOWLEDGE OF MAINTENANCE ON HONDA MOTORCYCLES, MOTOR SCOOTERS OR ATVS.

HONDA MOTOR CO., LTD.
SERVICE PUBLICATION OFFICE

Contents

| | | |
|------------------------|----------------------------------|----|
| | General Information | 1 |
| | Frame/Body Panels/Exhaust System | 2 |
| | Maintenance | 3 |
| Engine and Drive Train | Lubrication System | 4 |
| | Cooling System | 5 |
| | Fuel System | 6 |
| | Engine Removal/Installation | 7 |
| | Cylinder Head | 8 |
| | Clutch/Gearshift Linkage | 9 |
| | Crankcase/Cylinder/Piston | 10 |
| | Crankshaft/Transmission | 11 |
| Chassis | Front Wheel/Suspension/Steering | 12 |
| | Rear Wheel/Suspension | 13 |
| | Brake System | 14 |
| Electrical | Charging System/Alternator | 15 |
| | Ignition System | 16 |
| | Electric Starter/Starter Clutch | 17 |
| | Lights/Meters/Switches | 18 |
| | Wiring Diagram | 19 |
| | Troubleshooting | 20 |