

Service Access Guide

- The following shows the locations of the parts that must be removed for the maintenance items listed below. Refer to the Common Service Manual for items not included in this manual.
- Refer to section 2(Frame/body panels/exhaust system), for the parts that must be removed for service.

For example: AIR CLEANER(Contamination, clogging, replacement):Parts

- Side cover The parts must be removed for service.
- Fuel tank

