

Maintenance Schedule

Perform the PRE-RIDE INSPECTION in the Owner's Manual at each scheduled maintenance period.

I : Inspect and Clean, Adjust, Lubricate, or Replace if necessary.

R : Replace, C : Clean, L : Lubricate, A : Adjust

The following items require some mechanical knowledge. Certain items (Particularly those marked * and **) may require more technical information and tools. Consult their authorized Honda dealer.

Item	Frequency	Whichever comes first Note	Odometer Reading (Note 1)								Refer to page
			x 1,000 km	1	6	12	18	24	30	36	
			x 1,000 mi	0.6	4	8	12	16	20	24	
			Month		6	12	18	24	30	36	
* Fuel Line					I		I		I	Note 5	
* Throttle Operation					I		I		I	Note 5	
* Carburetor Choke					I		I		I	Note 5	
Air Cleaner		Note 2					R		R	3-5	
Spark Plug					I		R		I	3-5	
* Valve Clearance			I				I			3-5	
Engine Oil			R		R		R		R	Note 5	
Engine Oil Filter			R		R		R		R	Note 5	
* Carburetor Synchronization					I		I		I	3-9	
* Carburetor Idle Speed			I	I	I	I	I	I	I	Note 5	
Radiator Coolant		Note 3			I		I		R	Note 5	
* Cooling System					I		I		I	Note 5	
* Secondary Air Supply System		Note 4			I		I		I	Note 5	
Drive Chain			Every 1,000 km (600 mi) I, L								Note 5
Drive Chain Slider					I		I		I	Note 5	
Brake Fluid		Note 3			I	I	R	I	I	R	Note 5
Brake Pad Wear					I	I	I	I	I	Note 5	
Brake System			I		I		I		I	Note 5	
* Brakelight Switch					I		I		I	Note 5	
* Headlight Aim					I		I		I	Note 5	
Clutch System			I	I	I	I	I	I	I	Note 5	
Side Stand					I		I		I	3-10	
* Suspension					I		I		I	Note 5	
* Nuts, Bolts, Fasteners			I		I		I		I	Note 5	
** Wheels/Tires					I		I		I	Note 5	
** Steering Head Bearings			I		I		I		I	Note 5	

* Should be serviced by an authorized Honda dealer, unless the owner has the proper tools and service data and is mechanically qualified.

** In the interest of the safety, we recommended these items be serviced only by an authorized Honda dealer.

- Notes :
1. At higher odometer readings, repeat at the frequency interval established here.
 2. Service more frequently when riding in unusually wet or dusty areas.
 3. Replace every 2 years, or at indicated odometer interval, whichever comes first. Replacement requires mechanical skill.
 4. Switzerland and Austria type only.
 5. Refer to Common Service Manual.