

▲ WARNING

• Gasoline is extremely flammable and is explosive under certain conditions.

- Work in a well ventilated area. Smoking or allowing flames or sparks in the work area where gasoline is stored can cause a fire or explosion.

NOTE

• Route each tube correctly referring page 1-20.

Requisite Service

- Air cleaner case removal/installation(page 6-3)

Procedure		Q'ty	Remarks
	Removal Order		Installation is in the reverse order of removal.
(1)	Throttle stop screw	1	
(2)	Carburetor insulator band screw	4	Only loosening.
(3)	Choke cable	1	
(4)	Throttle cable	2	
(5)	Carburetor assembly	1	NOTE
			• After removing the carburetor assembly, do not place it up side down or air funnel might be deformed.