
Cylinder Head Removal/Installation

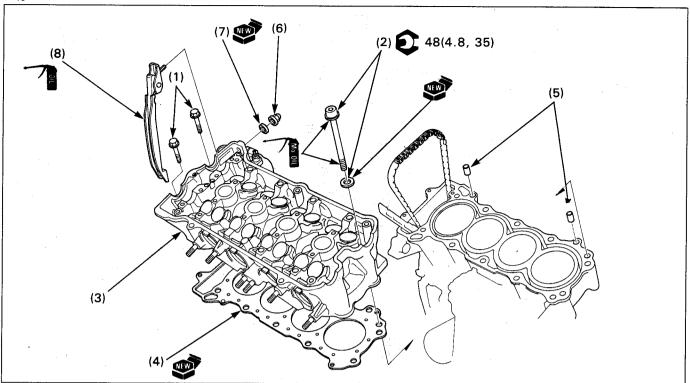

Requisite Service

• Exhaust system removal/installation(page 2-10)

Camshaft removal/installation (page 8-2)

Procedure		Q'ty	Remarks
ų.	Removal Order		Installation is in the reverse order of removal.
(1)	Cylinder head bolt (6mm)	2	
(2)	Cylinder head bolt (9mm)/Sealing washer	10/10	From the outside to the inside, loosen the bolts in a crisscross pattern in several steps.
(3)	Cylinder head assembly	1	Suspend the cam chain with a piece of wire to prevent the chain from falling into the crankcase.
(4)	Gasket	1	James and Granical
(5) ⁻	Dowel pin	2	
(6)	Cap nut	1 1	,
(7)	Sealing washer	1	
(8)	Cam chain tensioner slider	1	