


Front Brake Caliper Removal/Installation

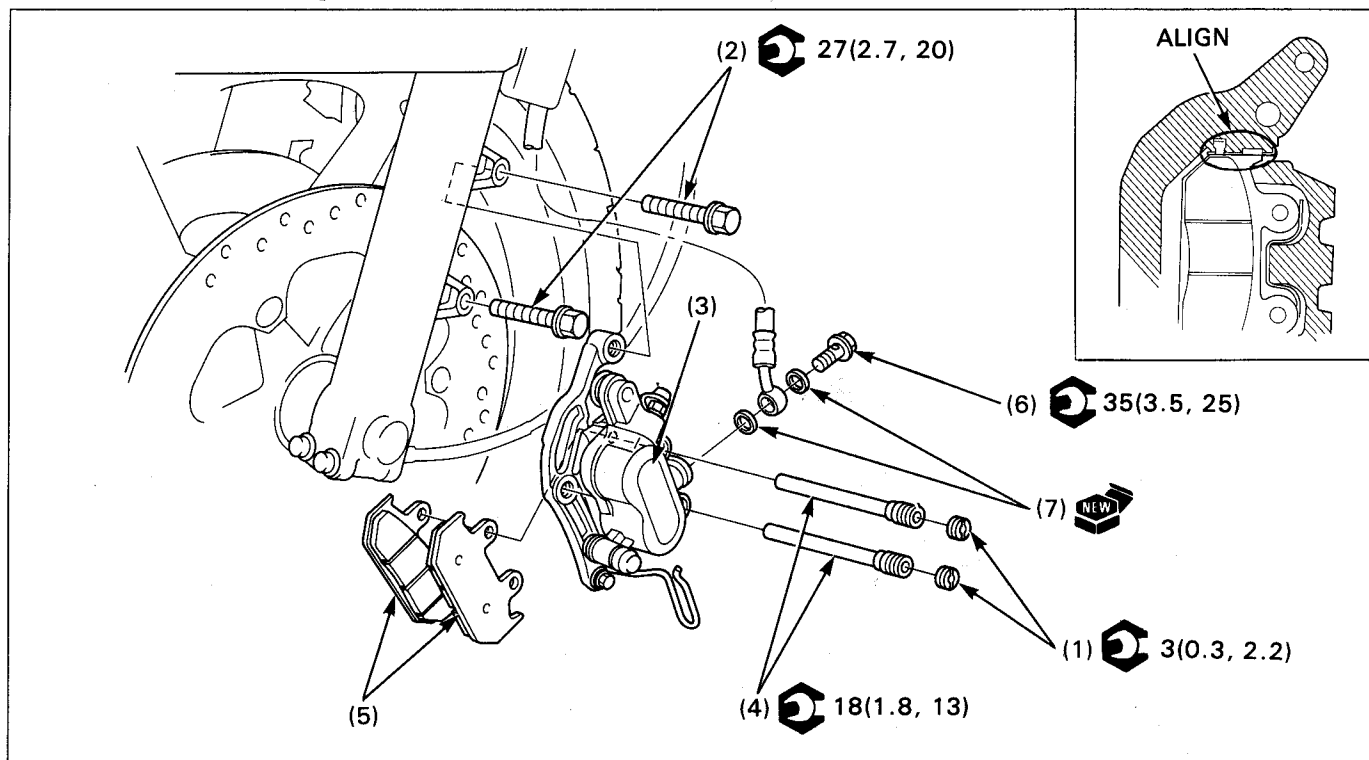

▲ WARNING

- Do not get grease on the brake disc or stopping power will be reduced.
- Discard contaminated pads and clean a contaminated disc with a high quality brake degreasing agent.
- Check the brake system by applying the brake after pad replacement.

NOTE

- Operate the brake lever to seat the caliper pistons against the pads after the pad replacement.
- The brake pad replacement can be serviced without disconnecting the hydraulic system.
- Always replace the brake pads in pairs to assure even disc pressure.
- If you plan to remove the front brake caliper, loosen the brake hose bolt before removing the front brake caliper from the fork slider.

Procedure	Q'ty	Remarks
Removal Order		Installation is in the reverse order of removal.
Pad replacement		
(1) Pad pin plug	2	After removing the pad pin plugs, loosen the pad pins.
(2) Caliper bracket bolt	2	
(3) Front brake caliper assembly	1	
(4) Pad pin	2	Insert the pins during pushing the pads against the pad spring.
(5) Brake pad	2	Position the pad onto the pad retainer in the caliper as shown.
Front brake caliper removal		
(6) Brake hose bolt	1	
(7) Sealing washer	2	