

CAUTION

- Avoid spilling fluid on painted, plastic, or rubber parts. Place a rag over these parts whenever the system is serviced.

Requisite Service

- Front brake caliper removal/installation(page 14-5)

Procedure		Q'ty	Remarks
Disassembly Order			
(1)	Caliper bracket	1	
(2)	Pad spring	1	
(3)	Bracket pin bolt boot	1	
(4)	Caliper pin bolt boot	1	
(5)	Bracket pin bolt	1	
(6)	Caliper pin bolt	1	
(7)	Caliper piston	2	
(8)	Dust seal	2	CAUTION • Be careful not to damage the piston sliding surface when removing the seals.
(9)	Piston seal	2	
Assembly Order			
(9)	Piston seal	2	
(8)	Dust seal	2	
(7)	Caliper piston	2	Install them with the opening foward the pads.
(6)	Caliper pin bolt	1	Apply a locking agent to the threads and torque it. Apply silicone grease to the sliding surface of the pin.
(5)	Bracket pin bolt	1	
(4)	Caliper pin bolt boot	1	Install the boot into the bracket groove securely.
(3)	Bracket pin bolt boot	1	
(2)	Pad spring	1	
(1)	Caliper bracket	1	