

Charging Coil Inspection

NOTE

- It is not necessary to remove the alternator from the engine.

Remove the seat (page 2-2).

Disconnect the alternator 3P connector and measure the resistance between the connector terminals (Yellow and Yellow).

Standard : 0.1-1.0 Ω (20° C/68° F)

Check for continuity between the Yellow wire terminal and ground.

There should be no continuity.

