

## Maintenance Fundamentals


### **| Cleaning and Lubricating**

After inspecting the slack, clean the chain and sprockets while rotating the rear wheel using a dry cloth or a light brush.

Saturate each chain link joint so that the lubricant penetrates between the link plates, pins, bushings, and rollers.

#### **Recommended lubricant:**

Pro Honda HP Chain Lube or  
SAE 80/90 gear oil

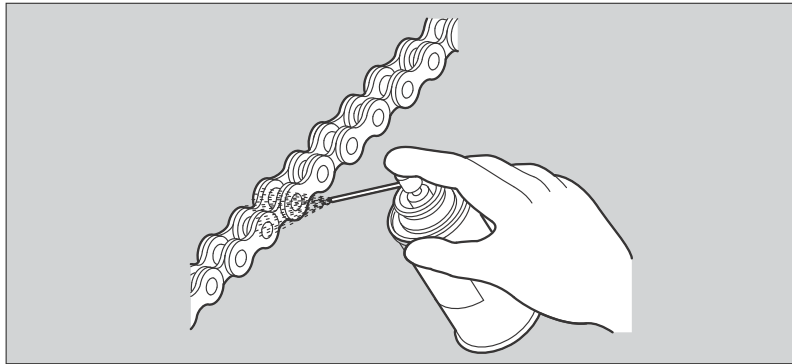

Avoid getting lubricant on the brakes or tyres.  
Avoid applying excess chain lubricant to prevent spray onto your clothes and the motorcycle.

### **Air Cleaner**

This motorcycle is equipped with a viscous type air cleaner element.

Air blow cleaning or any other cleaning can degrade the viscous element performance and cause the intake of dust.

### **Crankcase Breather**

Service more frequently when riding in rain, at full throttle, or after the motorcycle is washed or overturned. Service if the deposit level can be seen in the transparent section of the drain tube.