
Clip

The clip must be removed to remove the font top cover.

Removal

- **1.** Press down on the centre pin to release the lock.
- **2.** Pull the clip out of the hole.

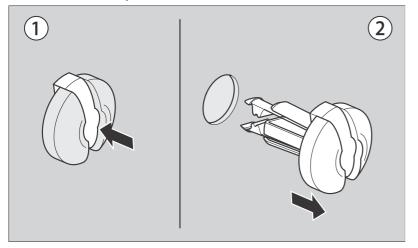

Installation

- **1.** Slightly open the retaining pawls and then push them out.
- **2.** Insert the clip into the hole.
- **3.** Lightly press down on the centre pin to lock the clip.

