

Odometer/Fuel Gauge Display

When the ignition switch is turned ON, the odometer (1) and fuel gauge (2) will temporarily show all the digital segments.

Odometer

Shows accumulated mileage.

If the mileage is under 100,000 km (mile), the mileage will show in the display.

If the mileage is over 100,000 km (mile), the 6th digit of the total mileage shows briefly before showing the remaining 5 digits in the display.

Fuel Gauge


The fuel gauge liquid crystal display shows the approximate fuel supply available in a graduated display. When the segment F (3) goes on, the fuel tank capacity including reserve is:

3.7 ℓ (0.98 US gal , 0.81 Imp gal)


When segment E (4) flashes, fuel will be low and you should refill the tank as soon as possible.

The amount of fuel left in the tank with the vehicle set upright is approximately:

0.8 ℓ (0.21 US gal , 0.18 Imp gal)

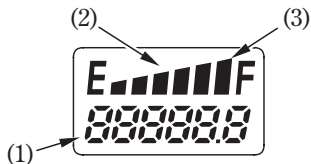

(If the mileage is over 100,000 km or mile)

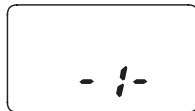

(1) Odometer
(2) Fuel gauge

(3) Segment F
(4) Segment E