
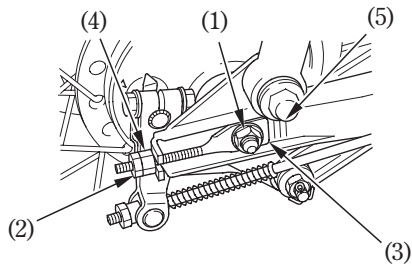


Adjustment:

If the drive chain requires adjustment, the procedure is as follows:

1. Place the motorcycle on its center stand with the transmission in neutral and the ignition switch off.
 2. Loosen the rear axle nut (1).
 3. Loosen the drive chain lock nuts (2) on both sides of the drive chain adjusters (3).
 4. Turn the drive chain adjusting nuts (4) on both sides of the drive chain adjusters an equal number of turns to increase or decrease chain slack. Turn the drive chain adjusting nuts clockwise to tighten the chain, or counterclockwise to provide more slack.
- Align the end of the drive chain adjusters with the corresponding scale graduations (5) on both sides of the swingarm.

< GR type > < Except GR type >

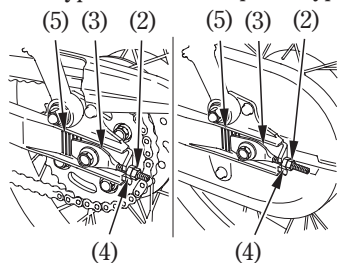

- | | |
|---------------------------|--------------------------------|
| (1) Rear axle nut | (4) Drive chain adjusting nuts |
| (2) Drive chain lock nuts | (5) Scale graduations |
| (3) Drive chain adjusters | |