


WHEEL REMOVAL

Refer to the Safety Precautions on page 63 .

Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the front axle nut cap (1).
3. Remove the front axle nut (2).
4. Remove the front axle shaft (3), side collars and the wheel.

Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

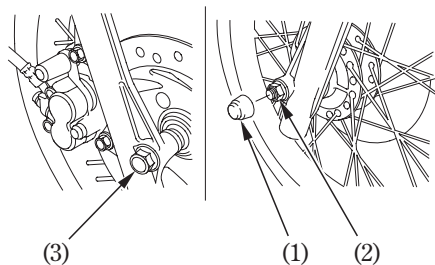

- (1) Front axle nut cap
- (2) Front axle nut
- (3) Front axle shaft