


## BRAKES

### Brake Pedal:

Free play, measured at the end of the pedal (1), should be 15–20 mm (5/8–3/4 in.).

Adjust by turning the adjusting nut (2) located on the brake operating rod at the rear of the frame.

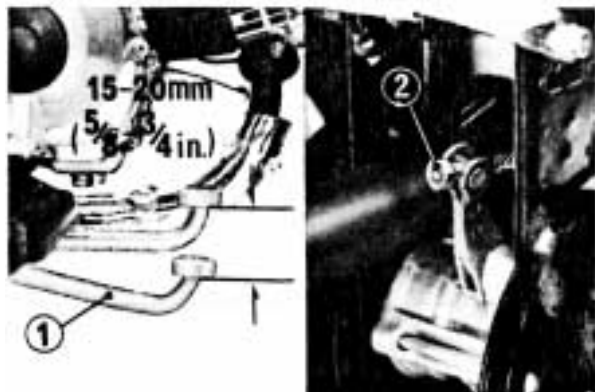


(1) Brake pedal

(2) Pedal adjusting nut

### Brake Lever/Parking Brake:

Free play, measured at the tip of the brake lever (3), should be within 15–20 mm (5/8–3/4 in.).

Adjusting nuts (4) are located at the brake cable mount on the right side of the frame just behind the engine.

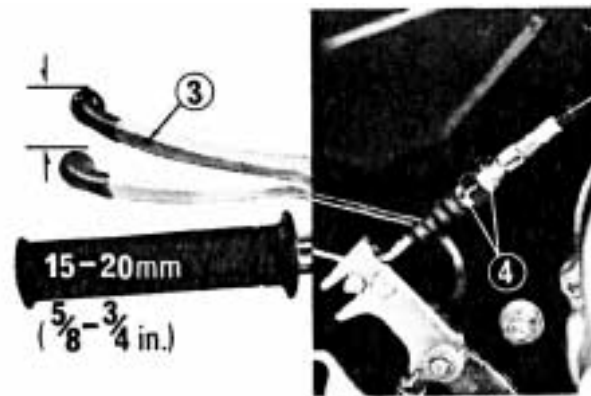

(3) Brake lever

(4) Lever adjusting nuts