

## Fuel Tank

Fuel tank capacity is 7.2ℓ (1.9 US gal) including 0.54ℓ (0.14 US gal) in the reserve supply. Remove the fuel tank cap (1) by twisting counterclockwise.

Any automotive gasoline with a pump octane number ( $\frac{R+M}{2}$ ) of 86 or higher, or research octane number of 91 or higher may be used.

If “knocking” or “pinging” occurs, try a different brand of gasoline or a higher octane grade.


The fuel tank cap (1) has a lever (2) with “ON” and “OFF” positions to open or close the tank vent. The lever should be turned to “ON” to allow fuel to flow when running the engine.

Turning the lever to “OFF” will prevent fuel from flowing out the vent hole when transporting the ATC.

### WARNING

- \* *Gasoline is extremely flammable and is explosive under certain conditions. Refuel in a well ventilated area with the engine stopped. Do not smoke or allow open flames or sparks in the area where the vehicle is refueled or where gasoline is stored.*

- \* *Do not overfill the tank (there should be no fuel in the filler neck). After refueling, make sure the filler cap is closed securely.*
- \* *Avoid repeated or prolonged contact with skin or breathing of vapor. KEEP OUT OF REACH OF CHILDREN.*

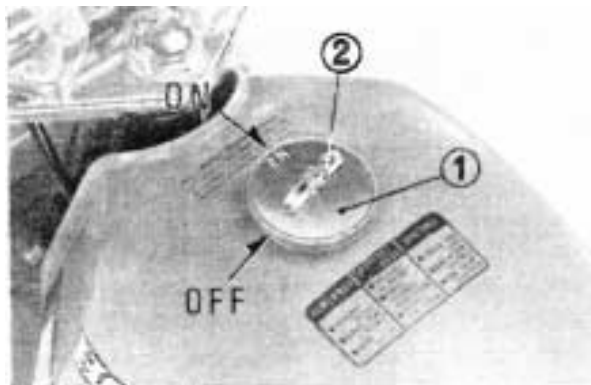

(1) Fuel filler cap

(2) Cap lever