

# //////////////////// OPERATION //////////////////////////////////////

## PRE-RIDE INSPECTION

### WARNING

*\* If the Pre-ride Inspection is not performed, serious damage or an accident may result.*

Inspect your ATC every day before you start the engine. The items listed here will only take a few minutes to check and in the long run can save time, expense, and possibly your life.

1. Engine oil level – if required add engine oil (page 15). Check for leaks.
2. Fuel level – fill the fuel tank when necessary (page 13). Check for leaks.
3. Brakes – check operation. If necessary adjust free play (page 47).
4. Tires – check condition and pressure (page 17).
5. Drive chain – check condition and slack (page 51). If necessary adjust and lubricate.
6. Throttle – check for smooth opening and closing in all steering positions (page 8).
7. Headlight switch – check for proper function (page 7).

8. Engine stop switch – check for proper function (page 6).
9. Nuts, Bolts, Fasteners – check the wheels to see that the axle nuts are tightened and secured by cotter pins. Check the security of all other nuts, bolts and fasteners.

Correct any discrepancy before you ride. Contact your authorized Honda dealer for assistance if you cannot correct the problem.