


CAM CHAIN

An improperly adjusted cam chain will adversely affect engine performance. The cam chain will rattle and be noisy if it needs a tension adjustment. Adjust tension while the engine is idling.


1. To adjust, loosen the lock nut (1) and tensioner adjusting bolt (2) approximately 1-1/2 turn.

2. If the chain is still noisy, remove the 14 mm sealing bolt located on the left bottom side of the crankcase, and screw in the tensioner bolt (3) gradually until the cam chain becomes quiet. After adjustment, tighten the tensioner adjust bolt, lock nut, and 14 mm sealing bolt securely.

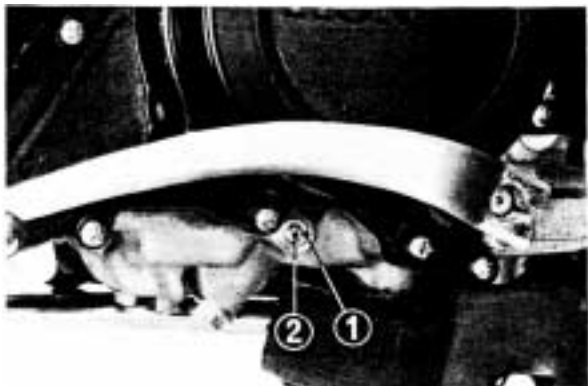

(1) Lock nut

(2) Tensioner adjusting bolt

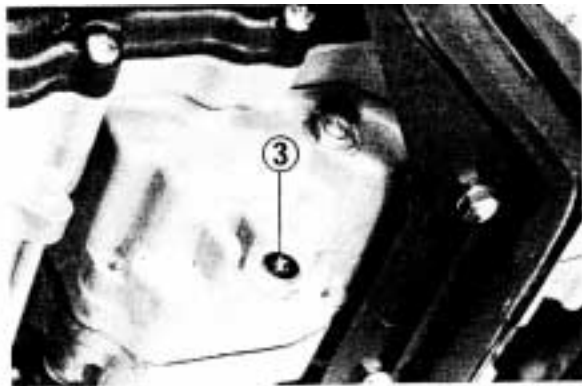

(3) Tensioner bolt