


REAR WHEEL REMOVAL

1. Place a support block under the ATC and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1) with the 12 mm socket wrench.
3. Remove the wheel.

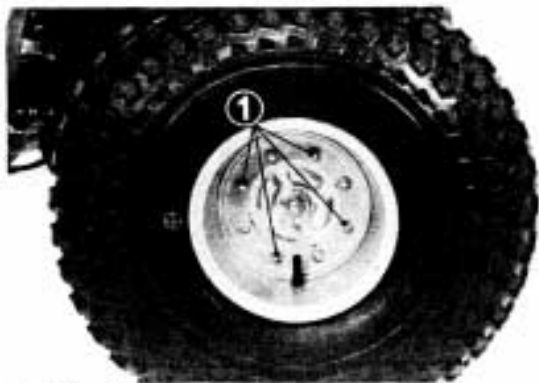

(1) Wheel nuts

Installation Notes:

- Reinstall the rear wheel in the reverse order of disassembly.
- Tighten the wheel nuts (1) in a cross-pattern and torque them to 18–25 N·m (1.8–2.5 kg·m, 13–18 ft·lb).

⚠ WARNING

** If a torque wrench was not used for installation, see your authorized Honda dealer as soon as possible to verify proper assembly.*