

//////////////////// CONTENTS //////////////////////

| | Page | | Page |
|----------------------------|------|-------------------------------------|------|
| ATC SAFETY | 1 | Carburetor | 45 |
| DESCRIPTION | 4 | High Altitude | 46 |
| Parts Location | 4 | Spark Plug | 48 |
| Serial Numbers | 6 | Air Cleaner | 49 |
| Parts Function | 7 | Valves | 50 |
| Fuel | 18 | Clutch | 52 |
| Engine Oil | 20 | Brakes | 53 |
| Tires | 22 | Throttle Cable | 58 |
| OPERATION | 24 | Final Drive Oil | 57 |
| Pre-ride Inspection | 24 | Cam Chain | 58 |
| Starting the Engine | 26 | Battery | 59 |
| Break-in | 28 | Spark Arrestor | 61 |
| Riding | 29 | STORAGE GUIDE | 62 |
| Parking | 38 | TRANSPORTING | 64 |
| MAINTENANCE | 39 | NOISE EMISSION CONTROL SYSTEM | 68 |
| Maintenance Schedule | 39 | SPECIFICATIONS | 69 |
| Tool Kit | 41 | WIRING DIAGRAM | 70 |
| Engine Oil | 42 | OPTIONAL PARTS | 71 |
| Oil Filter Rotor | 43 | WARRANTY SERVICE | 72 |
| Fuel Filter | 44 | | |