

# CONTENTS

	Page		Page
ATC SAFETY . . . . .	1	Valves . . . . .	42
DESCRIPTION . . . . .	4	Clutch . . . . .	44
Parts Location . . . . .	4	Brakes . . . . .	45
Serial Numbers . . . . .	6	Throttle Cable . . . . .	48
Parts Function . . . . .	7	Drive Chain . . . . .	49
Fuel . . . . .	11	Cam Chain . . . . .	50
Engine Oil . . . . .	13	Spark Arrester . . . . .	51
Tires . . . . .	15	STORAGE GUIDE . . . . .	52
OPERATION . . . . .	17	TRANSPORTING . . . . .	54
Pre-ride Inspection . . . . .	17	NOISE EMISSION CONTROL SYSTEM . . . . .	57
Starting the Engine . . . . .	18	SPECIFICATIONS . . . . .	58
Break-in . . . . .	21	WIRING DIAGRAM . . . . .	59
Riding . . . . .	22	OPTIONAL PARTS . . . . .	60
Parking . . . . .	30	WARRANTY SERVICE . . . . .	64
MAINTENANCE . . . . .	31		
Maintenance Schedule . . . . .	31		
Tool Kit . . . . .	33		
Engine Oil . . . . .	34		
Engine Oil Filter Rotor . . . . .	35		
Fuel Strainer . . . . .	36		
Carburetor . . . . .	37		
High Altitude . . . . .	38		
Spark Plug . . . . .	40		
Air Cleaner . . . . .	41		