


PARTS FUNCTION

Ignition Switch

The three position ignition switch (1) is next to the left handlebar grip. In the RUN position, the engine will operate. In either OFF position the engine will not operate.

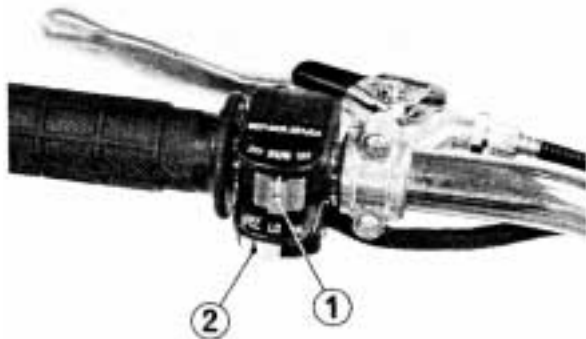

- (1) Ignition switch
- (2) Headlight switch

Headlight Switch

The headlight switch (2) is under the ignition switch. Its operating positions are as follows:

Position	Function
OFF	Headlight is off.
LO	Headlight is on low beam.
HI	Headlight is on high beam.