


AIR CLEANER

The air cleaner element accumulates dust and must be cleaned periodically. If the ATC200S is ridden in unusually dusty areas, the element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE.

1. Remove the seat by pulling the lever (1).
2. Remove the three wing bolts (2) securing the air cleaner cover.
3. Loosen the air cleaner band screw (3).
4. Remove the air cleaner element assembly from the air cleaner case.
5. Remove the retainer (4) from the air cleaner core and remove the air cleaner element (5).

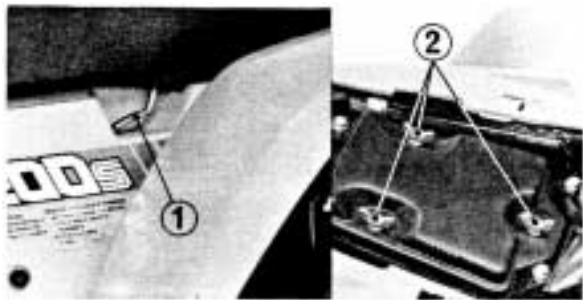

(1) Lever

(2) Wing bolts


6. Wash the element in a non-flammable or high flash point solvent. Allow it to dry thoroughly.

WARNING

- * *Never use gasoline or low flash point solvents for cleaning the air cleaner element. A fire or explosion could result.*
7. Soak the filter element in clean gear oil (SAE 80–SAE 90) until saturated, then squeeze out the excess oil.
 8. Reassemble by reversing the disassembly sequence.

CAUTION:

- * *To prevent damage, do not twist the filter element when squeezing out the excess oil.*

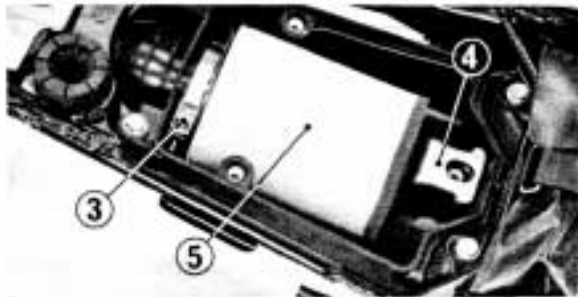

(3) Band screw

(4) Retainer

(5) Element