

## Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1) with a 12 mm socket wrench.
3. Remove the wheel.


## Installation Notes:

- Reinstall the rear wheels by reversing the disassembly sequence.
- Tighten wheel nuts (1) in a cross-pattern.

Torque for rear wheel nuts to 20–25 N·m (2.0–2.5 kg-m, 14–18 ft-lb) torque.

### WARNING

- \* *If a torque wrench was not used for installation, see your dealer as soon as possible to verify proper assembly.*

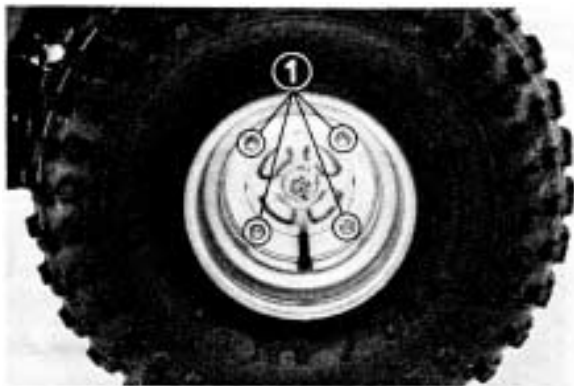

(1) Wheel nuts