


Helmet Holder

The helmet holder (1) is located on the right side of the fork bridge. To use the helmet holder, hang your helmet on the holder hook (2).



- * ***Do not operate the ATC with a helmet attached to the holder. The helmet holder is designed for use while parked.***

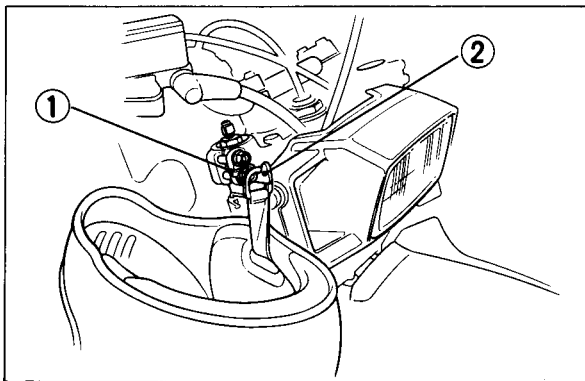

(1) Helmet holder (2) Hook


Owner's Manual Compartment

This owner's manual should be stored in the lower compartment (1) in the tool box.

When washing your ATC or riding through water, be careful not to flood this area with water.

NOTE:

- * The air pressure gauge should be stored in this owner's manual compartment.

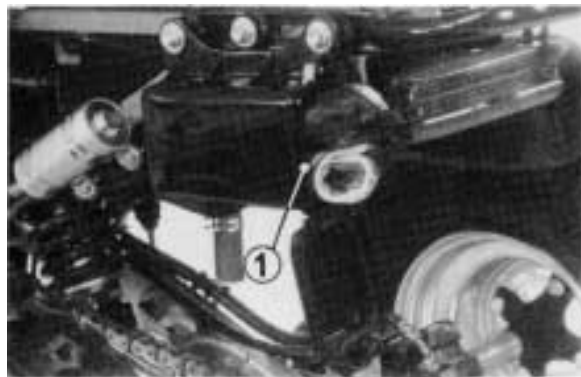

(1) Owner's manual compartment