

WARNING

- * *Always turn the engine off before performing any maintenance operations unless otherwise stated.*
 - * *To maintain the safety and reliability of your HONDA ATC, do not modify it and use only new genuine HONDA parts or their equivalent when servicing or repairing.*
- The use of replacement parts which are not of equivalent quality may impair the operation of your ATC.*

TOOL KIT

The tool compartment (1) is mounted on the left side below the rear fender on the rear grip pipe.

The tools provided are sufficient to perform routine maintenance and simple repairs. Any extensive work requiring additional tools should be performed by an authorized Honda motorcycle dealer.

- 17 mm box end wrench
- Screw driver
- Grip for screw driver
- 10 x 12 mm open end wrench
- Pliers
- Handle bar A
- 120 mm handle
- 12 x 14 mm open end wrench
- 18 mm box wrench

