

## PARTS FUNCTION

### Ignition Switch

The ignition switch (1) is on the handlebar upper holder.



(1) Ignition Switch

Key Position	Function	Key Removal
OFF	Engine and headlight cannot be operated.	Remove the key.
ON	Headlight can be turned on. With the engine stop switch at RUN and transmission in neutral, the engine can be started.	Key cannot be removed.