

| I: Inspect and Clean, Adjust, Lubricate or Replace,<br>if necessary<br>C: Clean      R: Replace<br>A: Adjust |                                      | EVERY                 | INITIAL<br>SERVICE<br>PERIOD<br>(First week of<br>operation) | REGULAR<br>SERVICE<br>PERIOD<br>(Every 30<br>operating days) | Refer to<br>page |
|--|--------------------------------------|-----------------------|--|--|------------------|
| *  | VALVE CLEARANCE                      |                       | I  | I  | 53-54            |
|  | ENGINE OIL                           |                       | R  | R  | 23-24            |
|  | ENGINE OIL FILTER                    |                       | R  | R  | 46               |
| *  | CARBURETOR IDLE SPEED                |                       | I  | I  | 48               |
|  | FINAL DRIVE OIL                      | YEAR: I<br>2 YEARS: R |  |  | 60               |
| *  | BRAKE SHOE WEAR                      | YEAR: I<br>NOTE 3     |  |  | 56, 58           |
|  | BRAKE SYSTEM                         |                       | I  | I  | 56-58            |
| *  | REVERSE LOCK SYSTEM                  |                       | I  | I  | —                |
|  | ENGINE UNDER GUARD AND<br>SKID PLATE |                       |  | I  | 61               |
| *  | CLUTCH SYSTEM                        |                       | I  | I  | 55               |
| *  | SUSPENSION                           |                       |  | I  | —                |
| *  | SPARK ARRESTER                       | NOTE 1                |  | C  | —                |
| *  | NUT, BOLT, FASTENER                  |                       | I  | I  | —                |
| **   | WHEELS                               |                       | I  | I  | —                |
| **   | STEERING HEAD BEARING                | YEAR: I               |  |  | —                |