


OPERATING INSTRUCTIONS

IGNITION SWITCH


The ignition switch ① is located on the right handlebar. Turn the switch to the "ON" position when starting the engine and to the "OFF" position to stop the engine.

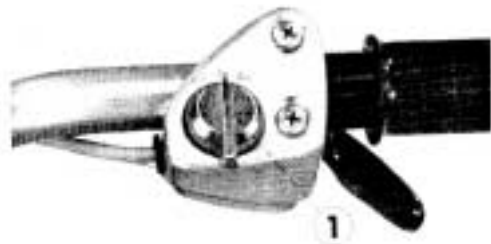

① Ignition switch

REAR BRAKE LEVER

The rear brake lever ① is located on the left handlebar and applies the brake to the rear wheels only. The brake lever free play should be 15~20 mm (0.6~0.8 in.) at the tip of the lever.

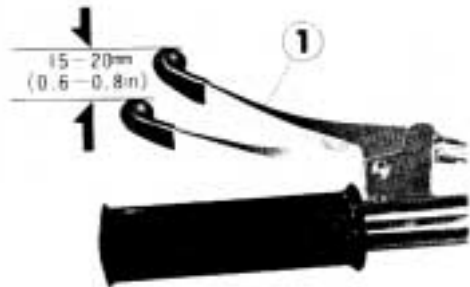

① Rear brake lever