

When refueling, take care to exclude dirt, water or other foreign materials from the fuel tank.

WARNING:

Gasoline is flammable, and explosive under certain conditions. Always stop the engine and do not smoke or allow open flames or sparks near the ATC-70 when draining or refueling.


FUEL DRAIN

A fuel drain is provided to drain the carburetor and fuel tank for storage or transport. The fuel drain is opened by turning the carburetor drain screw knob ① counterclockwise. If the fuel valve is set at the "S" position, only the carburetor will drain.

With the fuel valve set at the "RES" position, the fuel tank and carburetor will drain.

When draining, put the lower end of the carburetor drain tube ② into a suitable gasoline container.

Before refilling the fuel tank, close the fuel drain by turning the carburetor drain screw knob clockwise until tight.

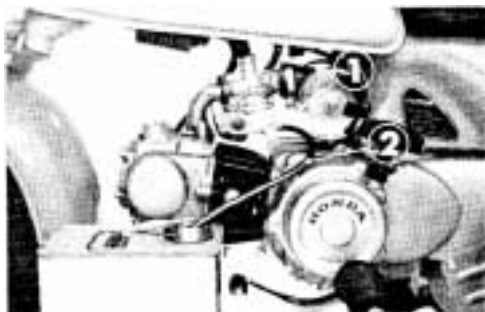

① Drain screw knob ② Drain tube