



## STARTING THE ENGINE

1. Turn the fuel valve lever ① to the "ON" position.
2. Turn the ignition switch ② to the "ON" position.
3. Shift the transmission into neutral.
4. Close the choke valve and open the throttle lever ③ approximately 1/4 to 1/3.

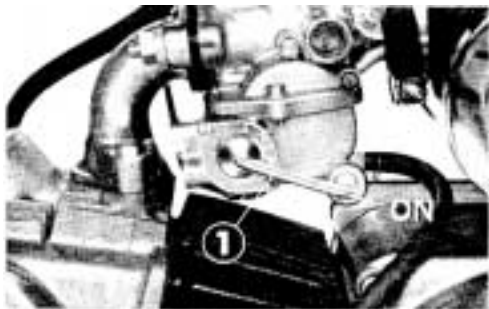

① Fuel valve lever

5. Pull the recoil starter rope ④ (page 17) lightly until compression is felt, then pull the rope quickly with a full arm stroke.

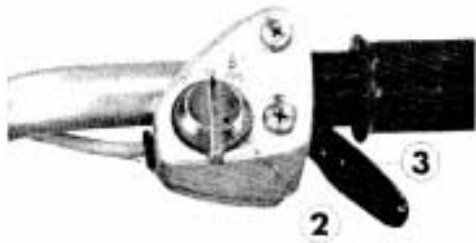

② Ignition switch ③ Throttle lever

If the engine fails to start after several attempts, it is possible that the engine may have become flooded with excess fuel. To unflood the engine, turn the ignition switch off, open the choke, hold the throttle fully open, and pull the