

The spark plug gap should be adjusted to 0.6~0.7mm (0.024~0.028 in.), by inserting a clearance gauge between the electrodes. To adjust the plug gap, carefully bend the side electrode.

Before installing the spark plug, clean any oil or dirt from the spark plug seat in the cylinder head.

Install the spark plug by hand until finger tight, then using the spark plug wrench, tighten the spark plug an additional 1/2 to 3/4 turn or until the sealing gasket is compressed.

AIR FILTER MAINTENANCE

The air filter element accumulates dust and must be cleaned periodically. If the ATC-70 is ridden in unusually dusty areas, the filter element must be cleaned at more frequent intervals than specified in the MAINTENANCE SCHEDULE.

1. Remove the nut ① and air cleaner cover ②.
2. Remove the filter element from the air cleaner case.



① Nut ② Air cleaner cover