


CLUTCH ADJUSTMENT

The automatic clutch must be adjusted with the engine stopped.

Remove the clutch adjuster rubber cap. Loosen the lock nut ①, and turn the clutch adjuster ② counterclockwise until resistance is felt. Then turn the clutch adjuster 1/8 to 1/4 turn clockwise, and tighten the lock nut to hold the adjuster

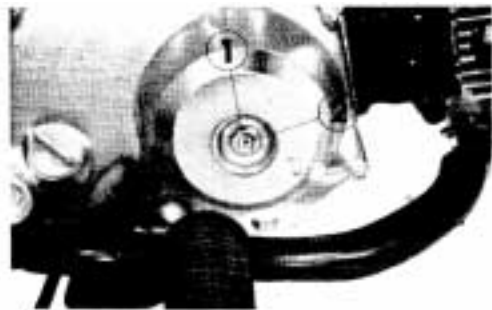

in this position. After adjusting, start the engine and test ride the ATC-70 to be sure that the clutch is operating properly.

① Lock nut ② Clutch adjuster