

REMOVING THE REAR WHEELS


1. Remove the cotter pin ① securing the left rear wheel axle nut ③.
2. Remove the axle nut and washer ②.
3. Remove the left rear wheel and wheel spacer ④ from the axle.
4. The right rear wheel is removed from the axle in the same way as the left rear wheel.



① Cotter pin ② Washer ③ Axle nut

INSTALLING THE REAR WHEELS

Reinstall the rear wheels by reversing the removal procedures. Be sure the raised side of the washer is installed towards the wheel. Replace cotter pins, if damaged.

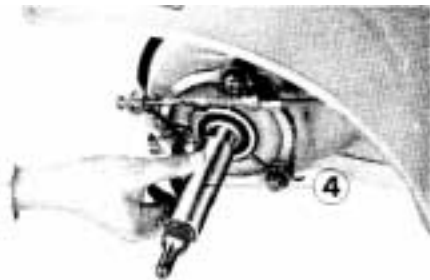

④ Wheel spacer