

# MAINTENANCE

## MAINTENANCE SCHEDULE

The maintenance intervals shown in the following schedule are based upon average riding conditions. Machines subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing. Items marked \* should be serviced by an authorized Honda dealer, unless the owner has the proper tools and is mechanically proficient. Other maintenance items are simple to perform and may be serviced by the owner.

Perform the Pre-ride Inspection (Page 16) at each scheduled maintenance period.

I: Inspect and Clean, Adjust, Lubricate or Replace, if necessary C: Clean R: Replace A: Adjust			INITIAL SERVICE PERIOD (First week of operation)	REGULAR SERVICE PERIOD (Every 30 operating days)	Refer to page
	ENGINE OIL	NOTE (1), (2)	R	R	24
*	CONTACT POINTS AND IGNITION TIMMING		I	I	31
	AIR CLEANER ELEMENT	NOTE (2)		C	33
	SPARK PLUG			I	32
*	VALVE CLEARANCE COLD		I	I	29
*	CAM CHAIN TENSIONER		A	A	37
*	CARBURETOR HOT		I	I	35

NOTE: (1) Replace every 30 operating days or every 3 months, whichever comes first

(2) Service more frequently when riding in dusty areas.