


CAUTION:

To maintain the safety and reliability of your HONDA ATC do not modify the ATC and use only new genuine HONDA parts or their equivalent when servicing or repairing.

The use of other replacement parts which are not of equivalent quality may impair the operation of your ATC.

TOOL KIT

A spark plug wrench and handle are attached under the rear of the seat. Any extensive work requiring additional tools should be performed by an authorized Honda dealer.

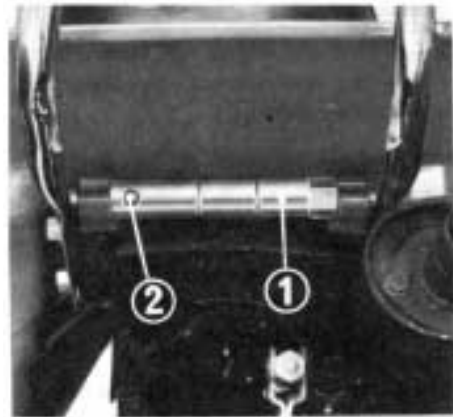

- ① Spark plug wrench
- ② Wrench handle