


## TRANSPORTING THE ATC (Continued)

### Rear Wheel Removal

1. Place a support block under the vehicle and raise the rear wheel off the ground.
2. Loosen the wheel nuts (1) with the 12 mm socket wrench.
3. Remove the wheel.

### Installation Note:

Reinstall the rear wheels by reversing the disassembly sequence.

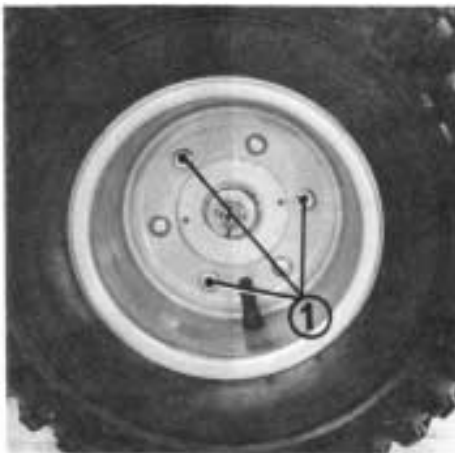

① Wheel nuts