

TRANSPORTING THE ATC (Continued)

REMOVING THE FRONT WHEEL

If limited carrying space requires removal of the front wheel, use the following procedure:

1. Remove the cotter pin ① securing the front axle nut.
2. Remove the axle nut ②
3. Pull out the axle and then remove the front wheel.

NOTE:

Cover the wheel hub as soon as the axle has been removed to prevent entry of dirt.



① Cotter pin

② Axle nut