
CAM CHAIN ADJUSTMENT

An improperly adjusted cam chain will adversely affect the engine. Adjust tension while the engine is idling.

- To adjust, loosen the lock nut (1) and tensioner adjusting bolt (2) approximately one half turn.
- 2. If the chain is still noisy even after adjustment, loosen the 14 mm sealing bolt located on the left bottom side of the crankcase, and screw in the tensioner bolt ③ gradually until the cam chain becomes quiet. After completing the adjustment, tighten the tensioner adjust bolt, lock nut, and 14 mm sealing bolt securely.



1 Lock nut 2 Tensioner adjusting bolt

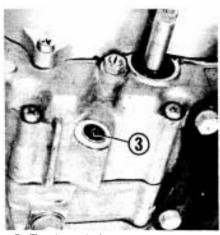

3 Tensioner bolt