

GEAR CHANGE PEDAL

The gear change pedal ① is located near the left foot rest. One full stroke of the gear change pedal will shift the transmission into gear. The pedal automatically returns to the horizontal position when released. The next stroke of the pedal engages the next gear in sequence. The shifting sequence is illustrated in the diagram on the opposite page.



① Gear change pedal

The pedal is depressed with the toe to upshift and is raised to downshift.

Starting with the transmission in neutral, the pedal is depressed to shift into low gear. 2nd, 3rd, and 4th gear are selected in sequence each time the pedal is again depressed.

Each time the pedal is raised, the next lower gear in sequence is engaged until the neutral position is reached.