

FUEL VALVE

The fuel valve is mounted on the left side of the carburetor.

“S” position


In this position the fuel flow will be cut off. Whenever the vehicle is not in use, set the valve to this position.

“ON” position

The fuel valve lever in this position will permit fuel to flow to the carburetor. When the engine is to be operated, set the valve to this position.

“RES” position

This is the reserve fuel position. The fuel valve should be set in this position only after the regular fuel supply has been consumed. The reserve fuel capacity is approximately one quart. When it becomes necessary to switch to the reserve fuel supply this serves as a warning to the rider that it is time to refill the fuel tank.

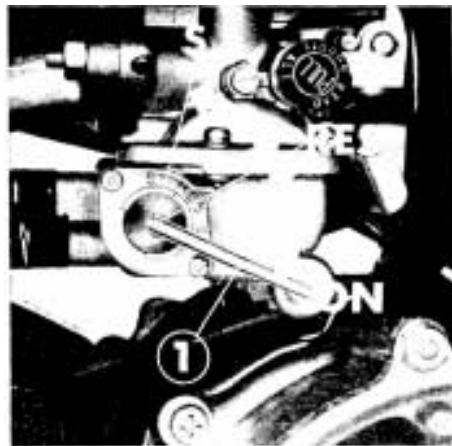

① Fuel valve lever