

THROTTLE LEVER

The throttle lever ① is located at the right handlebar grip and is operated by the rider's thumb. Pressing the lever forward opens the throttle. When the lever is released, spring tension closes the throttle automatically.



① Throttle lever