

MAINTENANCE

MAINTENANCE SCHEDULE

The maintenance intervals shown in the following schedule are based upon average riding conditions. Machines subjected to severe use, or ridden in unusually dusty areas, require more frequent servicing.

Items marked * should be serviced by an authorized Honda dealer, unless the owner has proper tools and is mechanically proficient. Other maintenance items are simple to perform and may be serviced by the owner.

INITIAL SERVICE PERIOD

FIRST WEEK OF OPERATION

- ENGINE OIL - Change.
- *CONTACT POINTS AND IGNITION TIMING - Clean, check, and adjust or replace if necessary.
- *VALVE TAPPET CLEARANCE - Check and adjust if necessary.
- *CAM CHAIN TENSION - Adjust
- *CARBURETOR - Check and adjust if necessary.
- THROTTLE OPERATION - Inspect cable. Check and adjust free play.
- *CLUTCH - Check operation and adjust if necessary.
- DRIVE CHAIN - Check, lubricate, and adjust if necessary.
- BRAKE CONTROL LINKAGE - Check linkage and adjust if necessary.
- TIRES - Inspect and check air pressure.
- LIGHTING EQUIPMENT - Check.
- ALL NUTS, BOLTS, AND OTHER FASTENERS - Check security and tighten if necessary.