

DRIVE CHAIN ADJUSTMENT

The drive chain will wear through use and requires periodic adjustment. Adjustment is normally performed in accordance with the MAINTENANCE SCHEDULE.

Loosen the chain tensioner locking nut ① and push the chain tensioner plate ② upward until resistance is felt. Retighten the locking nut.



① Nut ② Chain tensioner plate