




SEALING FUEL TANK CAP-
OPTIONAL EQUIPMENT.

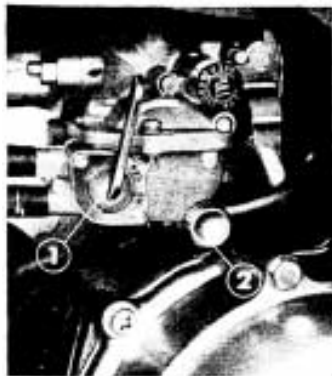

- ① FUEL VALVE
- ② DRAIN SCREW

TRANSPORTING THE ATC (Continued)

DRAINING FUEL FROM THE CARBURETOR ONLY; ATC EQUIPPED WITH SEALING FUEL TANK CAP

If your ATC is equipped with the optional, sealing fuel tank cap, it may be transported with gasoline in the fuel tank, and it will be necessary to drain the carburetor only.

1. Turn the fuel tank cap lever to the "OFF" position, and turn the carburetor fuel valve to the "S" position. This seals the fuel tank against leakage in transit.
2. Drain the carburetor as described in steps 2, 3, and 4 on the preceding page.