



## TRANSPORTING THE ATC (Continued)

### **REMOVING THE FRONT WHEEL**

If limited carrying space requires removal of the front wheel, the procedure is as follows:

1. Remove the cotter pins securing both front axle nuts.
2. Loosen both axle nuts, using the 17 mm socket from the tool kit. Remove the nuts and axle collars.
3. Remove the front wheel and axle from the ATC.
4. Remove the axle and wheel spacer from front wheel.

- ① AXLE NUT  
② AXLE COLLAR  
③ WHEEL SPACER